 


# H1essential

Handy Recorder

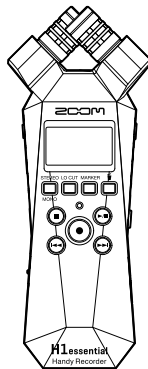

## Quick Tour

 
Software and documents related to this product can be found at the following website.



[zoomcorp.com/help/h1essential](https://zoomcorp.com/help/h1essential)

**You must read the Usage and Safety Precautions before use.**

## Inserting microSD cards

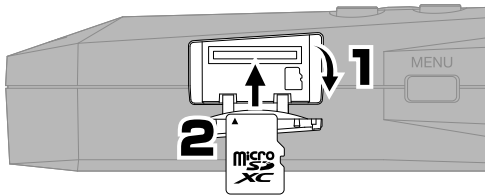

Supported recording media:

microSDHC: 4 GB – 32 GB




microSDXC: 64 GB – 1 TB

We recommend using microSD cards that have been confirmed to operate with this product. See the ZOOM website ([zoomcorp.com](http://zoomcorp.com)) for information about microSD cards that have been confirmed to work with this unit.


- Always turn the power off before inserting or removing a microSD card.
- To remove a microSD card, push it further into the slot and then pull it out.

## Turning the power on

   Open while pressing down.

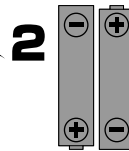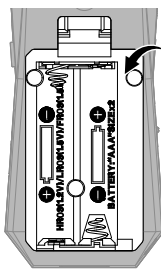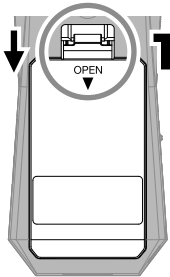

 
Alkaline,  
nickel-metal hydride  
or lithium batteries



Power can also be supplied through the USB (Type-C) port by connecting a commercially-available portable battery or a dedicated AC adapter (AD-17).

# Making settings when first turned on

 
## Accessibility setting

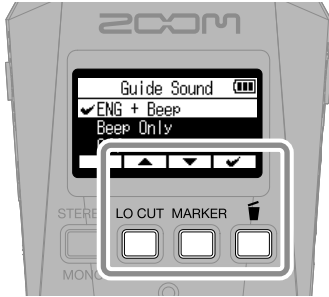

Use / to select a setting and to confirm.


A function that can enable audio guidance and beep sounds is included to assist use by people with vision impairments.

## Language setting

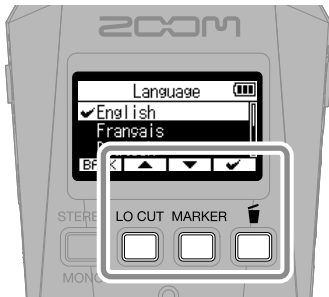 


Use / to select the language and to confirm.

## Date format setting

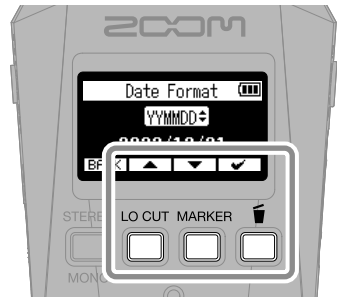 



The year, month and day will be used in the recording file name in the order set here.


## Date and time settings

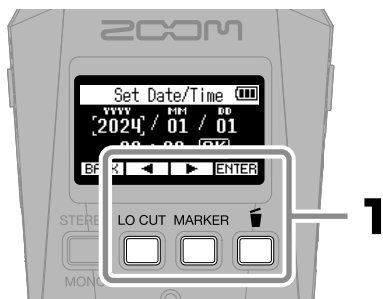 

 
Select a setting item, and press **ENTER** to confirm.

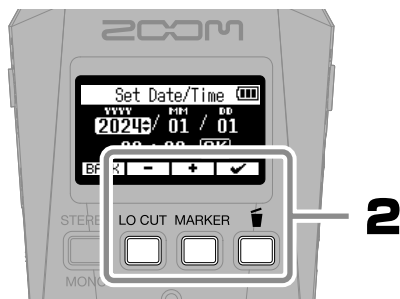


 Change the value, and press  to confirm.

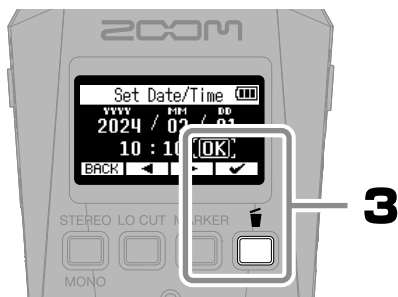


After setting all the items, select "OK" and press  to complete setting the date and time.

## Battery type setting

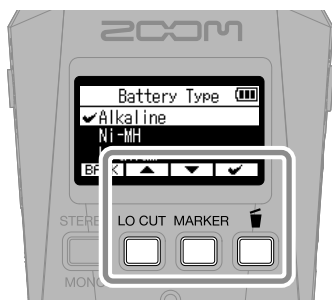 


Set the type of battery used correctly so that the amount of remaining battery charge can be shown accurately.

 We recommend running SD card tests on microSD cards after purchasing them new or using them with a different device.

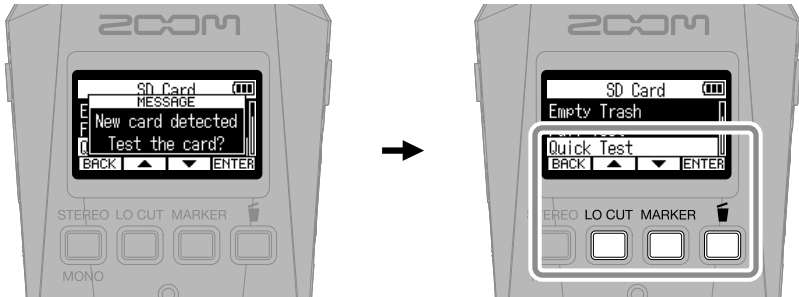


After setting is complete, the Home Screen will open.

### ■ Home Screen overview

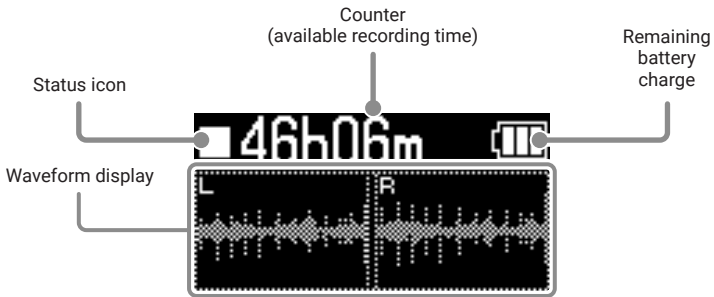 


# Preparing to record
 
## ■ Connecting headphones and adjusting the volume

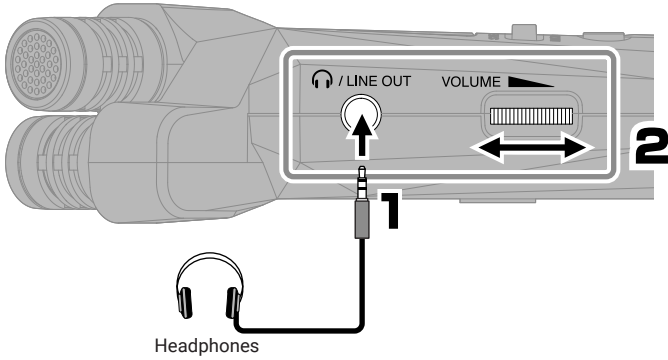


## ■ Reducing noise from wind and vocal pops

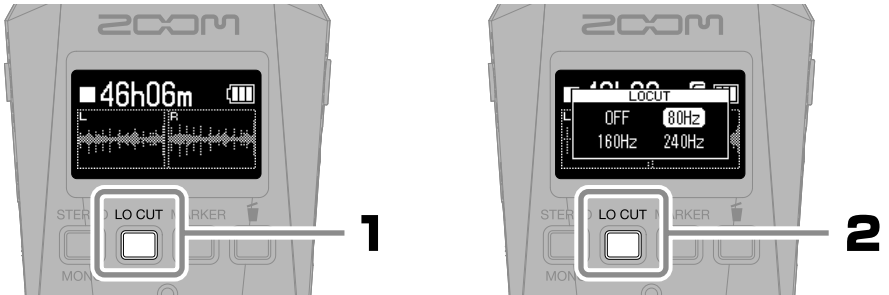 


## ■ Tip to improve recording sound quality

 If the H1essential is placed directly on a table, reflected sound can interfere with recording and reduce clarity. We recommend using a tripod, for example, to distance it from the table. Placing a handkerchief, for example, can also be effective in reducing sound reflected from a table.

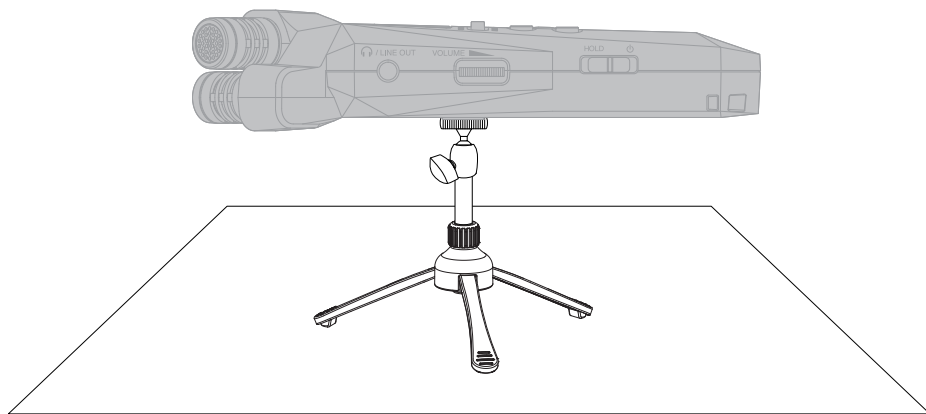

## ■ Using external mics

 
An external mic or line-level device can also be connected to the MIC/LINE IN jack and recorded. This can also provide plug-in power to mics that use it.

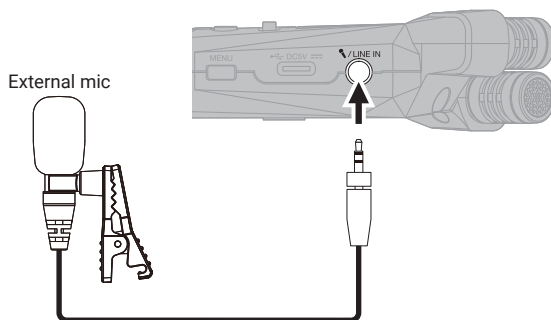


# Recording



 The indicator will light red and recording will start.

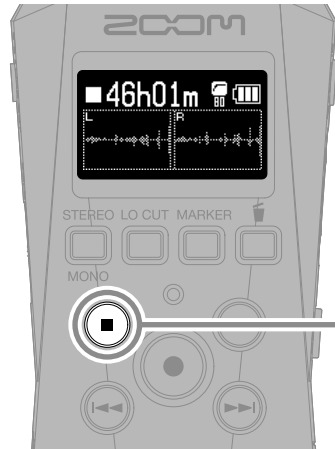




This ends recording.

Slide  toward HOLD when recording to prevent misoperation.

## ■ Operations during recording



	<p>This adds a marker for cueing during playback.</p>
	<p>This stops recording and moves the file to the trash.</p>
	<p>This starts and pauses recording.</p>



 





# Playing recordings



This starts playback.




## ■ Operations during playback

	<p>Normalization, exporting and A-B repeat playback, for example, are possible.</p>
	<p>Use these to move the file playback position backward/forward.</p>
	<p>This moves the file to the Trash.</p>
	<p>This stops playback.</p>
	<p>This starts and pauses playback.</p>
	<p>Use these to select the previous/next file. These will move between mark positions if there are marks. Press and hold to search backward/forward.</p>

## Accessing online help (2D code)

   Select Help from the Menu menu to show a 2D code.


Scan it with a smartphone to access detailed documents about the product.

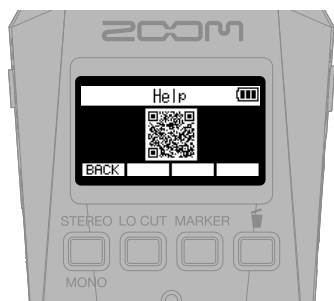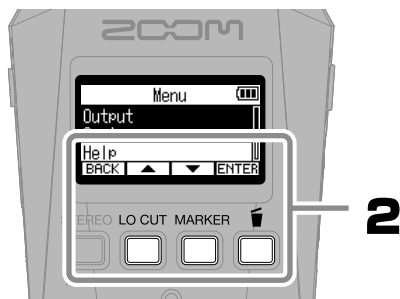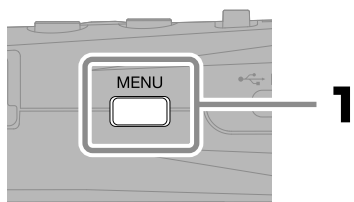

[zoomcorp.com/help/h1essential](http://zoomcorp.com/help/h1essential)

# Functions of parts
 
## ■ Top

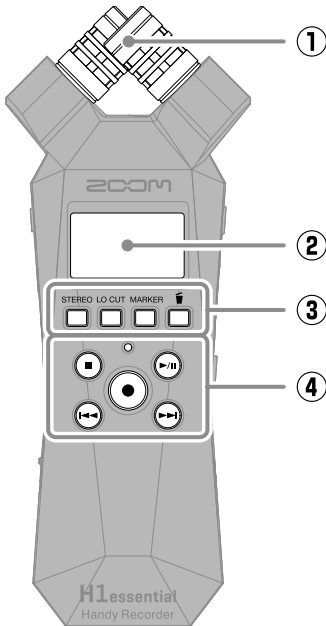

- ① **Built-in XY mic**

This stereo mic has two crossing directional mics. This mic can record three-dimensional sound with natural depth and width.
- ② **Display**

This shows various types of information.
- ③ **Operation buttons**

When the Home Screen is open, use these to make file format and low cut settings, add markers to recording files and move files to the trash.

When the Home Screen is not open, these have functions shown by icons at the bottom of the screen.
- ④ **Transport buttons**

**STOP button:** This stops recording or playback.


**PLAY/PAUSE button:** This starts/pauses playback of recorded files.

**REC button/Indicator:** This starts recording. The indicator lights during recording.

**REW button:** This skips to the previous file. Press and hold this to search backward.

**FF button:** This skips to the next file. Press and hold to search forward.

## ■ Left side

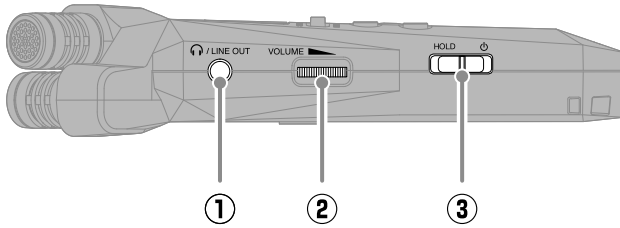 

### ① PHONE/LINE OUT jack

This outputs sound to headphones or a connected device.

 
### ② VOLUME dial

Use this to adjust the volume output from the speaker and headphones.

### ③ POWER/HOLD switch

Use this to turn the power on/off and to disable button operation.

## ■ Right side

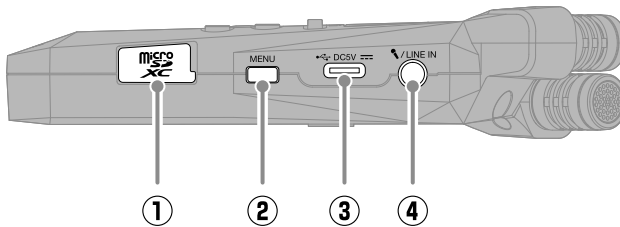

### ① microSD card slot

Insert a microSD card here.

### ② MENU button

Press this to open the Menu Screen.

### ③ USB port (Type-C)

Connect this to a computer, smartphone or tablet to use file transfer and USB mic functions.

 
This supports operation on USB bus power.

Use a USB cable that supports data transfer.

### ④ MIC/LINE IN jack

If an external mic is connected here, it can be used to record instead of the XY mic. This can also provide plug-in power to mics that require it.

## ■ Bottom

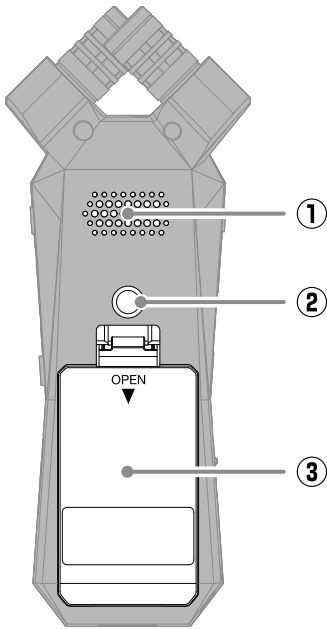


- ① **Speaker**  
Sound is output here during file playback.
- ② **Tripod mounting threads**  
Use these when connecting a tripod.
- ③ **Battery cover**  
Open this when installing and removing AAA batteries.

# Troubleshooting

## Sound is not output or the volume is very low

- Check the headphone and LINE OUT connections.
- Confirm that the headphone volume and line output level are not too low.
- Check the orientation of the mic or the volume settings of the connected equipment.

## Monitored sound is distorted

- Use  to adjust the volume.

## “MIC INPUT OVERLOAD!” appears

- The input sound is too loud. Increase the distance between the mic and the sound source.
- Wind can also cause loud noises to be input. We recommend using the Lo Cut setting to reduce noise if air is blown directly at a mic, for example, when recording outdoors or when a mic is near the mouth of a speaker.

## Recording is not possible

- Confirm that the microSD card has open space.
- Confirm that a microSD card is loaded properly in the card slot.

## The recorded sound breaks up

- Test the microSD card.  
See the Operation Manual for details.
- Use the H1 essential to format the microSD card.
- We recommend using microSD cards that have been confirmed to operate with this product.  
See the ZOOM website ([zoomcorp.com](http://zoomcorp.com)) for information about microSD cards that have been confirmed to work with this unit.

 
## Not recognized by computer when connected

- Use a USB cable that supports data transfer.

## Date and time are reset frequently

- If power is not supplied by an AC adapter or batteries for a long time, date and time settings will be reset.  
If the Set Date/Time Screen appears during start-up, set them again.

## Operation is not possible

- Confirm that  is not set to HOLD.

Product names, registered trademarks and company names in this document are the property of their respective companies.

The microSDXC logo is a trademark of SD-3C LLC.

USB Type-C is a trademark of the USB Implementers Forum.

All trademarks and registered trademarks in this document are for identification purposes only and are not intended to infringe on the copyrights of their respective owners.

Recording from copyrighted sources, including CDs, records, tapes, live performances, video works and broadcasts, without permission of the copyright holder for any purpose other than personal use is prohibited by law. ZOOM CORPORATION will not assume any responsibility related to infringements of copyrights.

The illustrations and display screens in this document could differ from the actual product.

# ZOOM®

ZOOM CORPORATION

4-4-3 Kanda-surugadai, Chiyoda-ku, Tokyo 101-0062 Japan

[zoomcorp.com](http://zoomcorp.com)